

 
#### **Maqueen Mechanic**



**Installation Manual** 









Loader Bucket



Pan-tilt-zoom Mount Plate



Trolley Plate



Ultrasonic Mount Holder



Arm Servo Base



Arm Baseplate



Arm Linkage





Servo Arm Linkage



Forklift Plate



Gripper Upper Arm

## Part List



Gripper Driven Forearm



Gripper Servo Forearm



Gripper Panel



Gripper Triangular Mount Plate



 M3\*35mm Copper Bolt



M3\*25mm Copper Bolt



M3\*15mm Copper Bolt



M3\*18mm Copper Bolt



Servo



M2.5\*5mm Screw



M3\*5mm Screw









Loader

Bulldozer

**Forklift** 



**Mechanical Beetle** 




Pan-tilt-zoom Mechanical Beetle




Pan-tilt-zoom Forklift

# Assemble and Install

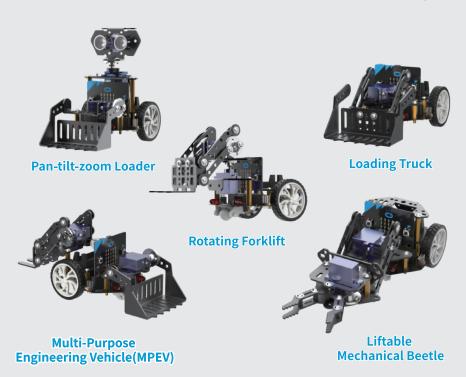



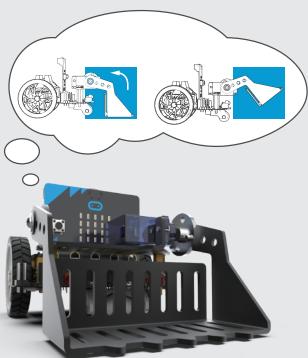


### **Install Loader**





Step1

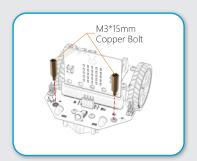


Step3



Step2



Step4

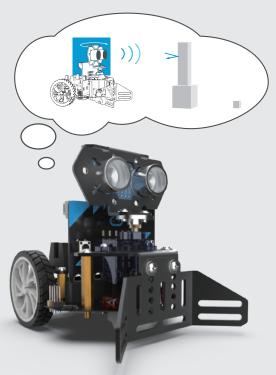

# Install Bulldozer



Step1




Step3



Step2



Step4

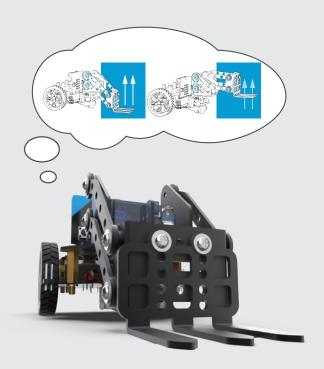


# Install Forklift



Step1



Step3

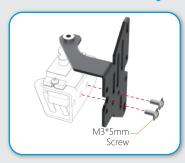

Step2



Step4

# Install Forklift



Step5



Step7




Step6



Step8

# Install Mechanical Beetle



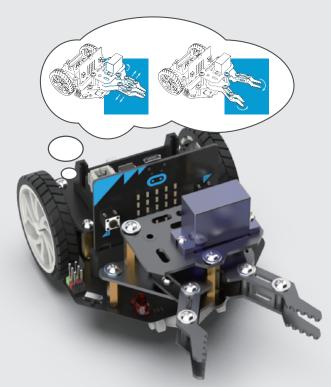



#### **Install Mechanical Beetle**



Step1



Step3



Step2




Step4

### Install Mechanical Beetle







Step5

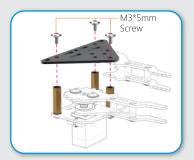

Step7

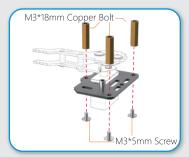


Step6

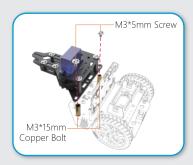

Step8




#### Install Pan-tilt-zoom Mechanical Beetle

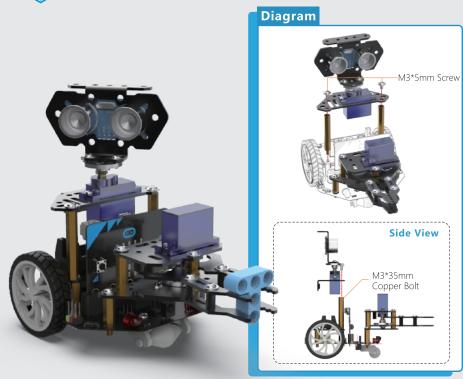


## Install Pan-tilt-zoom Forklift



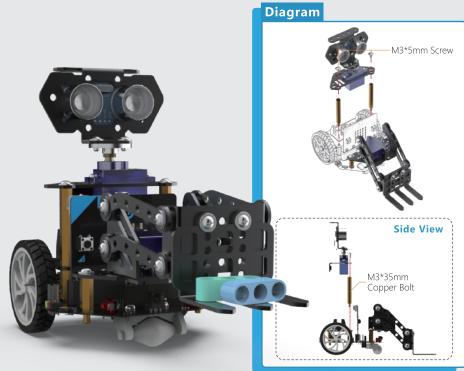





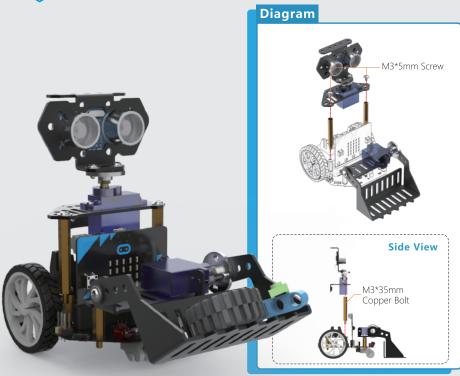

## Install Rotating Forklift




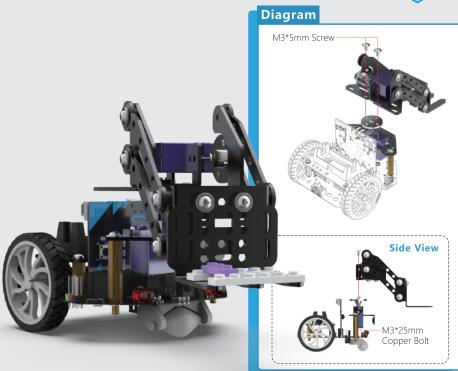

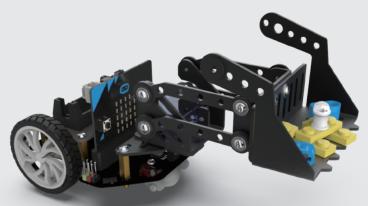

#### Diagram




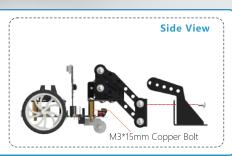



#### Diagram



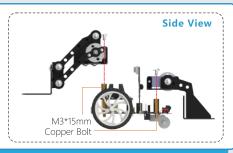



## Install Liftable Mechanical Beetle




### Install Liftable Mechanical Beetle





#### Diagram



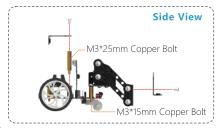



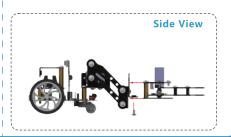

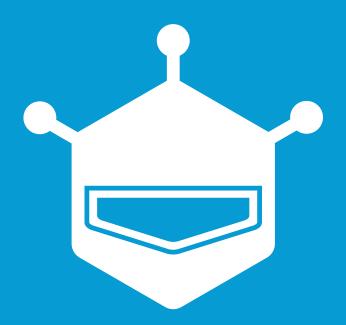

Welcome to www.dfrobot.com for more details