ASSEMBLING THE KLAW

1. 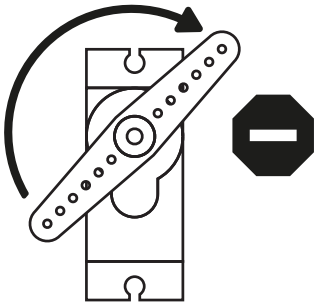

Connect a horn to the servo axle and gently rotate clockwise until it stops. Then rotate back an 1/8 turn.

2. Remove the horn from the servo and follow the diagram to assemble the rest of your Klaw.

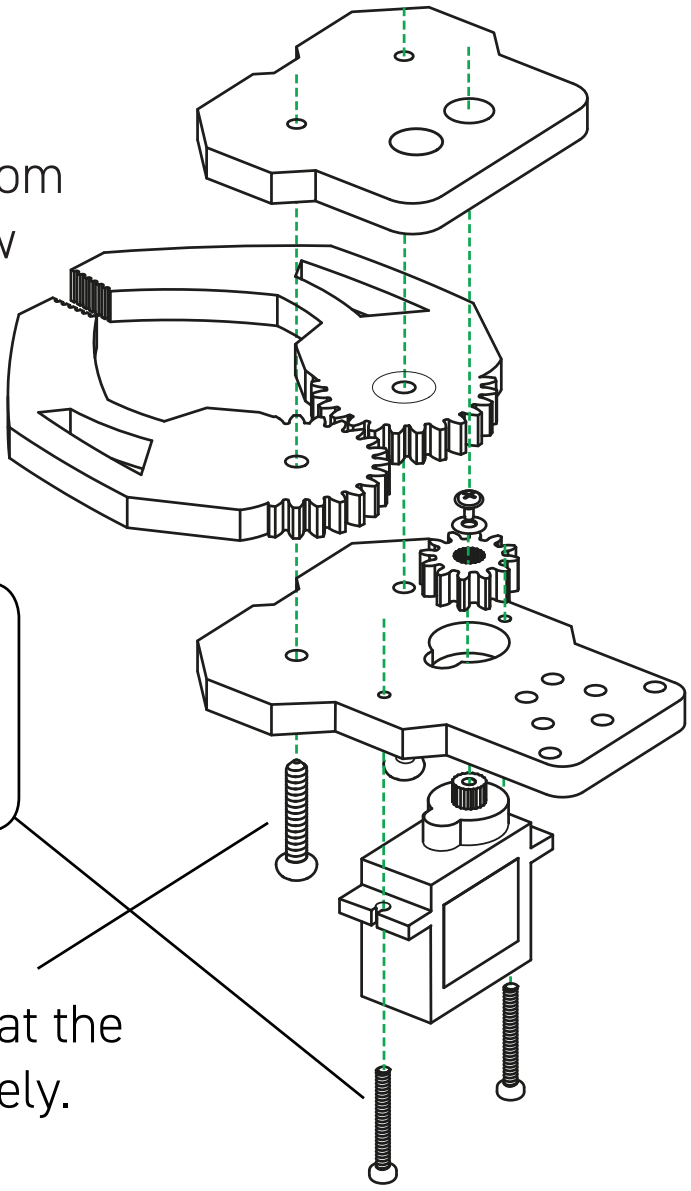

Take care not to damage the servos wires when tightening these screws!

3. Check these screws are loose enough that the klaws can rotate freely.

Kitronik